

			ReceiverEinstellung für manuelle Frequenzeingabe
Sonderkanal ESB	Frequenz in MHz	Kanal im Band IV	Frequenz in MHz
S21	306	21	474
S22	314	22	482
S23	322	23	490
S24	330	24	498
S25	338	25	506
S26	346	26	514
S27	354	27	522
S28	362	28	530
S29	370	29	538
S30	378	30	546
S31	386	31	554
S32	394	32	562
S33	402	33	570
S34	410	34	578
S35	418	35	586
S36	426	36	594
S37	434	37	602
S38	442	38	610
S39	450	39	618
S40	458	40	626
S41	466	41	634
		42	642